

1 CONFIGURE Y CONECTE

Conecte.


2 ENCIENDA Y ACTIVE

Active.

www.comcast.com/activate

Wireless Gateway de XFINITY (parte posterior)

El equipo real puede variar.

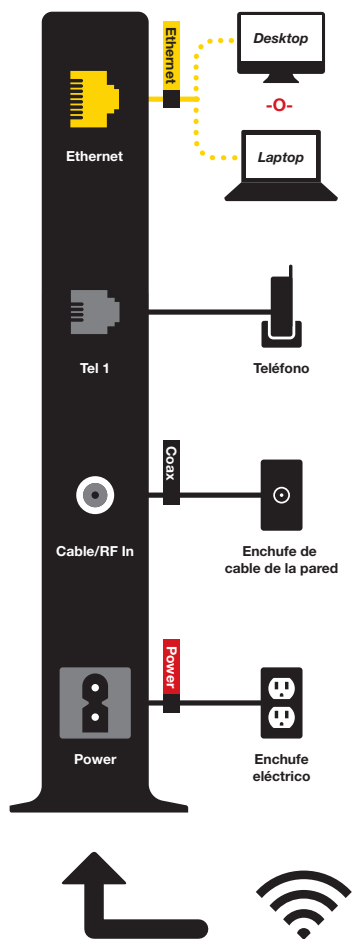

Conecte el cable de Ethernet desde la conexión de **Ethernet** en su computadora hasta la conexión de **Ethernet** en su Wireless Gateway.

Para poder activar con éxito su servicio a través de una computadora, su computadora debe estar encendida y conectada al equipo Wireless Gateway a través de un cable de Ethernet.

Para la activación inalámbrica, consulte la Guía de conexión y activación de la Wireless Gateway, que se encuentra en la carpeta de XFINITY.

Conecte un cable de teléfono (no incluido) desde su teléfono hasta la conexión de **Tel 1** en su Wireless Gateway.



Conecte un cable coaxial desde el enchufe de cable de la pared hasta la conexión de **Cable/RF In** en su Wireless Gateway. Asegúrese de ajustar esta conexión con los dedos.

Tal vez solo necesite un cable coaxial para la conexión de su Wireless Gateway, de modo que seleccione el largo que se adapte a sus necesidades.

Enchufe el cable eléctrico en su Wireless Gateway, luego en un enchufe eléctrico. Si su Wireless Gateway tiene un botón de encendido (Power), enciéndalo.

Después de la activación, use el **nombre de la red (SSID)** y la **contraseña** en la parte inferior o en el panel lateral del equipo para conectar su red inalámbrica.

Consulte su carpeta de XFINITY para obtener información sobre conexiones alternativas.

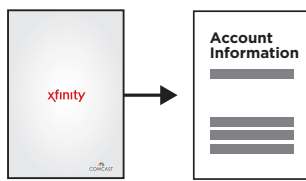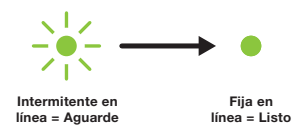

Espera que las luces de US/DS y Online dejen de parpadear y permanezcan completamente encendidas durante 1 minuto. Esto puede tardar hasta 20 minutos. Una vez que la luz esté fija, abra su navegador de la Web.

Para activar su servicio, necesitará el número de cuenta que le proporcionó el agente del Centro de Servicio de Comcast.

Su Wireless Gateway de XFINITY tiene capacidad de WiFi. Para seguir los pasos necesarios para la instalación de red en su hogar, consulte la Guía de conexión y activación de la Wireless Gateway, que se encuentra en la carpeta de XFINITY.

Para activar:
www.comcast.com/activate
 -0-
 1-855-OK-BEGIN (1-855-652-3446)

En su carpeta de XFINITY hay información disponible sobre cómo configurar las funciones de XFINITY® Internet y XFINITY® Voice, tales como la seguridad en línea y el correo de voz de XFINITY.

1-800-XFINITY

© 2015 Comcast. Derechos Reservados.

BL INT-V WGXB3 FCB SIK 0415




Self-Installation Instructions XFINITY INTERNET AND VOICE



For DIY Videos, Activation and FAQs:
Go to www.comcast.com/selfinstall



Inside the Kit.

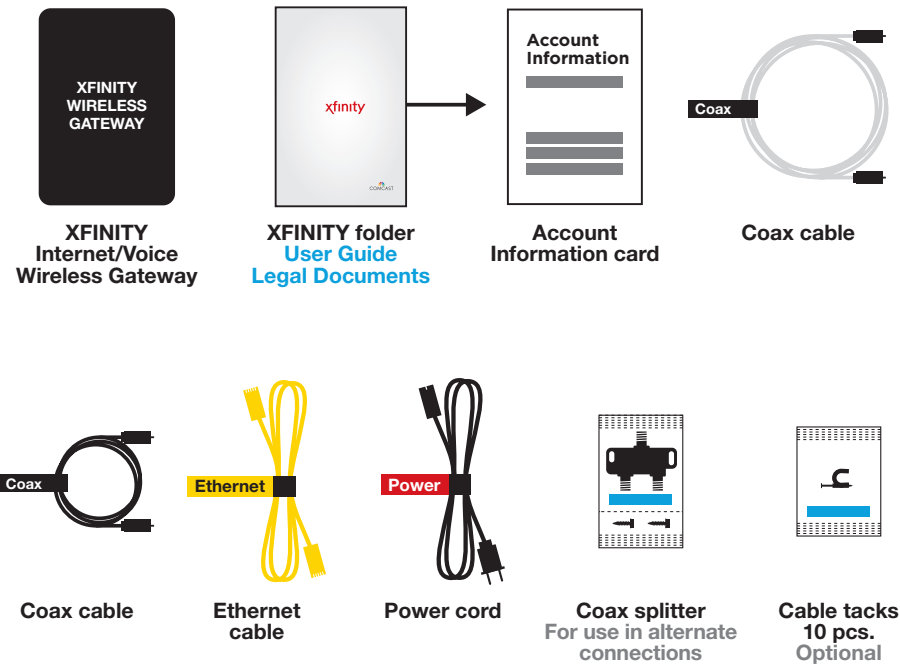


The Comcast Wireless Gateway 2 is a dual-band device and offers both 2.4 GHz and 5 GHz WiFi networks. While 5 GHz offers higher speeds than 2.4 GHz, not all WiFi devices will support the newer 5 GHz technology. To learn more about your Wireless Gateway, refer to your User Guide in the XFINITY folder.

Para obtener más información sobre su wireless gateway, consulte su Guía del usuario en la carpeta de XFINITY.

1 SET UP & CONNECT

Connect.

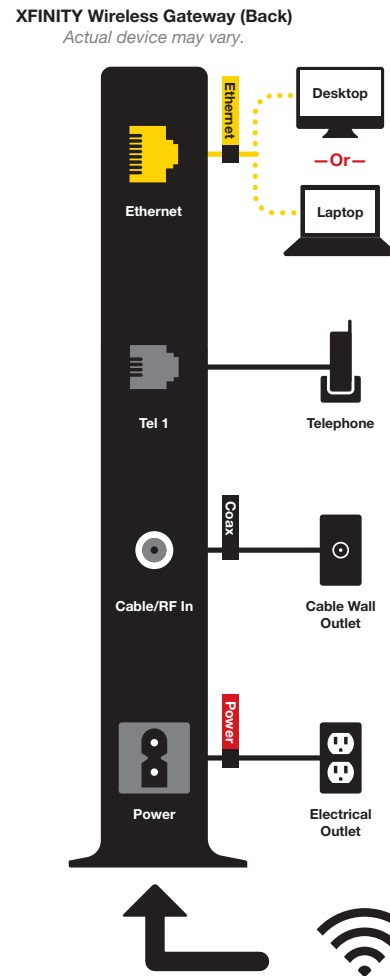

Connect the Ethernet cable from the **Ethernet** connection on your computer to the **Ethernet** connection on your Wireless Gateway.

In order to successfully activate your service via a computer, your computer must be powered on and connected to the Wireless Gateway via the Ethernet cable.

For wireless activation, refer to the Wireless Gateway Activation and Connection Guide in your XFINITY folder.

Connect a telephone cord (not included) from your telephone into the **Tel 1** connection on your Wireless Gateway.

Connect a coax cable from your cable wall outlet to the **Cable/RF In** connection on your Wireless Gateway. Make sure this connection is finger tight.

You may only need one coax cable for your Wireless Gateway connection, so select the length that suits your needs.

Plug the power cord into your Wireless Gateway, then into an electrical outlet. If your Wireless Gateway has a Power button, turn it on.


After activation, use the **Network Name (SSID)** and **Password** on the bottom or side panel of the device to connect your wireless network.

Refer to your XFINITY folder for alternate connection information.


2 POWER UP & ACTIVATE

Activate.

www.comcast.com/activate

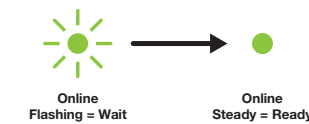

Wait for the US/DS and Online LEDs to stop blinking and remain completely lit for 1 minute. This may take up to 20 minutes. Once the light is solid, open up your Web browser.

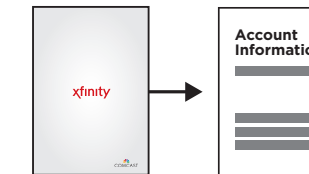

To activate your service, you will need the Account Number given to you by the Comcast Service Center agent.



Your XFINITY Wireless Gateway is WiFi capable. To walk you through the setup of your home network, refer to the Wireless Gateway Activation and Connection Guide found in your XFINITY folder.



To Activate:
www.comcast.com/activate
 — or —
 1-855-OK-BEGIN (1-855-652-3446)



Information on how to set up XFINITY® Internet and Voice features, such as online security and XFINITY voicemail, is available in your XFINITY folder.

1-800-XFINITY
 © 2015 Comcast. All rights reserved.